



STENTEN'S INSTRUCTIONS



Installation Instructions

LP2000S

Headlight & Bezels


Club Car DS *(Fits Factory Cutout)*



1. This pattern is for the headlight on the driver side of the Club Car.
2. Use a scissor to cut out the pattern on the solid line being careful to save the "S" curve on the top right.
 - a. Be sure to cut along dotted line on bottom of pattern and align each side and tape together.
3. Align the "S" curve on the pattern to the "S" curve on the cowl. Also line up the top of the pattern with the body.
4. Use masking tape in three places to secure the template to the cowl.
5. Mark the four corners and use a $\frac{3}{8}$ inch drill and drill through the paper and the cowl.
6. Run masking tape strips from hole to hole on the cowl to form a rectangle.
7. Using a flexible steel rule as a guide, mark guide lines between the outsides of the locator holes.
8. Cut to the *inside* of the guide lines using a saber saw.
9. Test the bezel for fit. Use a flat wood rasp to enlarge the opening as necessary to obtain the proper fit for the bezel.
10. When the bezel is properly located, drill pilot holes in one corner of the bezel and secure with the sheet metal screws that are furnished.
11. Secure the diagonally opposite corner with a sheet metal screw in the same manner.
12. Secure the remaining corners.
13. Turn the pattern over for the passenger's side bezel installation.



STENTEN'S INSTRUCTIONS

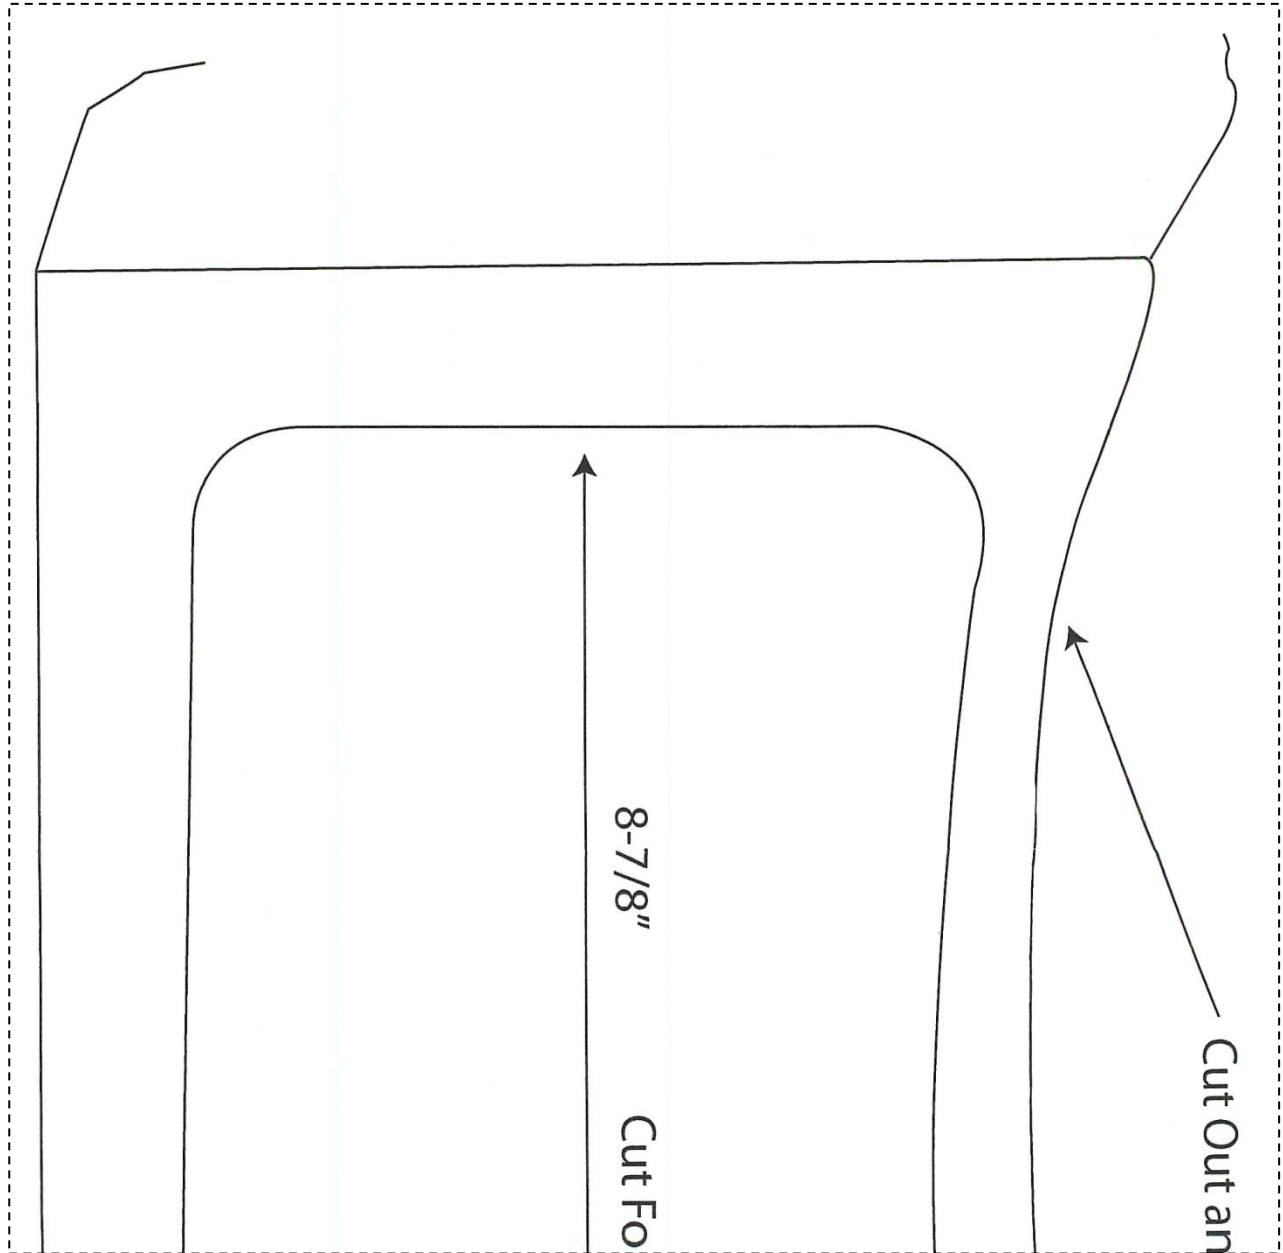



STENTEN'S INSTRUCTIONS

