



STENTEN'S INSTRUCTIONS



INSTALLATION INSTRUCTIONS

LP2001

Headlights & Bezels

Club Car DS




NOTICE: The following instructions have been written for Club Car, 1993 and newer, with Armorflex body.

1. This pattern is for the headlight on the passenger side of the Club Car.
2. Use a scissor to cut out the pattern on the solid line being careful to save the "S" curve on the top right.
3. Align the "S" curve on the pattern to the "S" curve on the cowl. This will line up the chine line on the paper to the chine line on the cowl.
4. Use masking tape in three places to secure the template to the cowl.
5. Mark the four corners using the locator holes as guides, or use a $\frac{3}{8}$ inch drill and drill through the paper and the cowl.
6. Run masking tape strips from hole to hole on the cowl to form a rectangle.
7. Using a flexible steel rule as a guide, mark guide lines between the outsides of the locator holes. Before cutting, verify that the lower guide line is $1\frac{5}{8}$ inch below the chine line of the cowl.
8. Cut to the *inside* of the guide lines using a saber saw.
9. Test the bezel for fit. Use a flat wood rasp to enlarge the opening as necessary to obtain the proper fit for the bezel.
10. When the bezel is properly located, drill pilot holes in one corner of the bezel and secure with the sheet metal screws that are furnished.
11. Secure the diagonally opposite corner with a sheet metal screw in the same manner.
12. Secure the remaining corners.
13. Turn the pattern over for the driver's side bezel installation.



STENTEN'S INSTRUCTIONS

Pattern

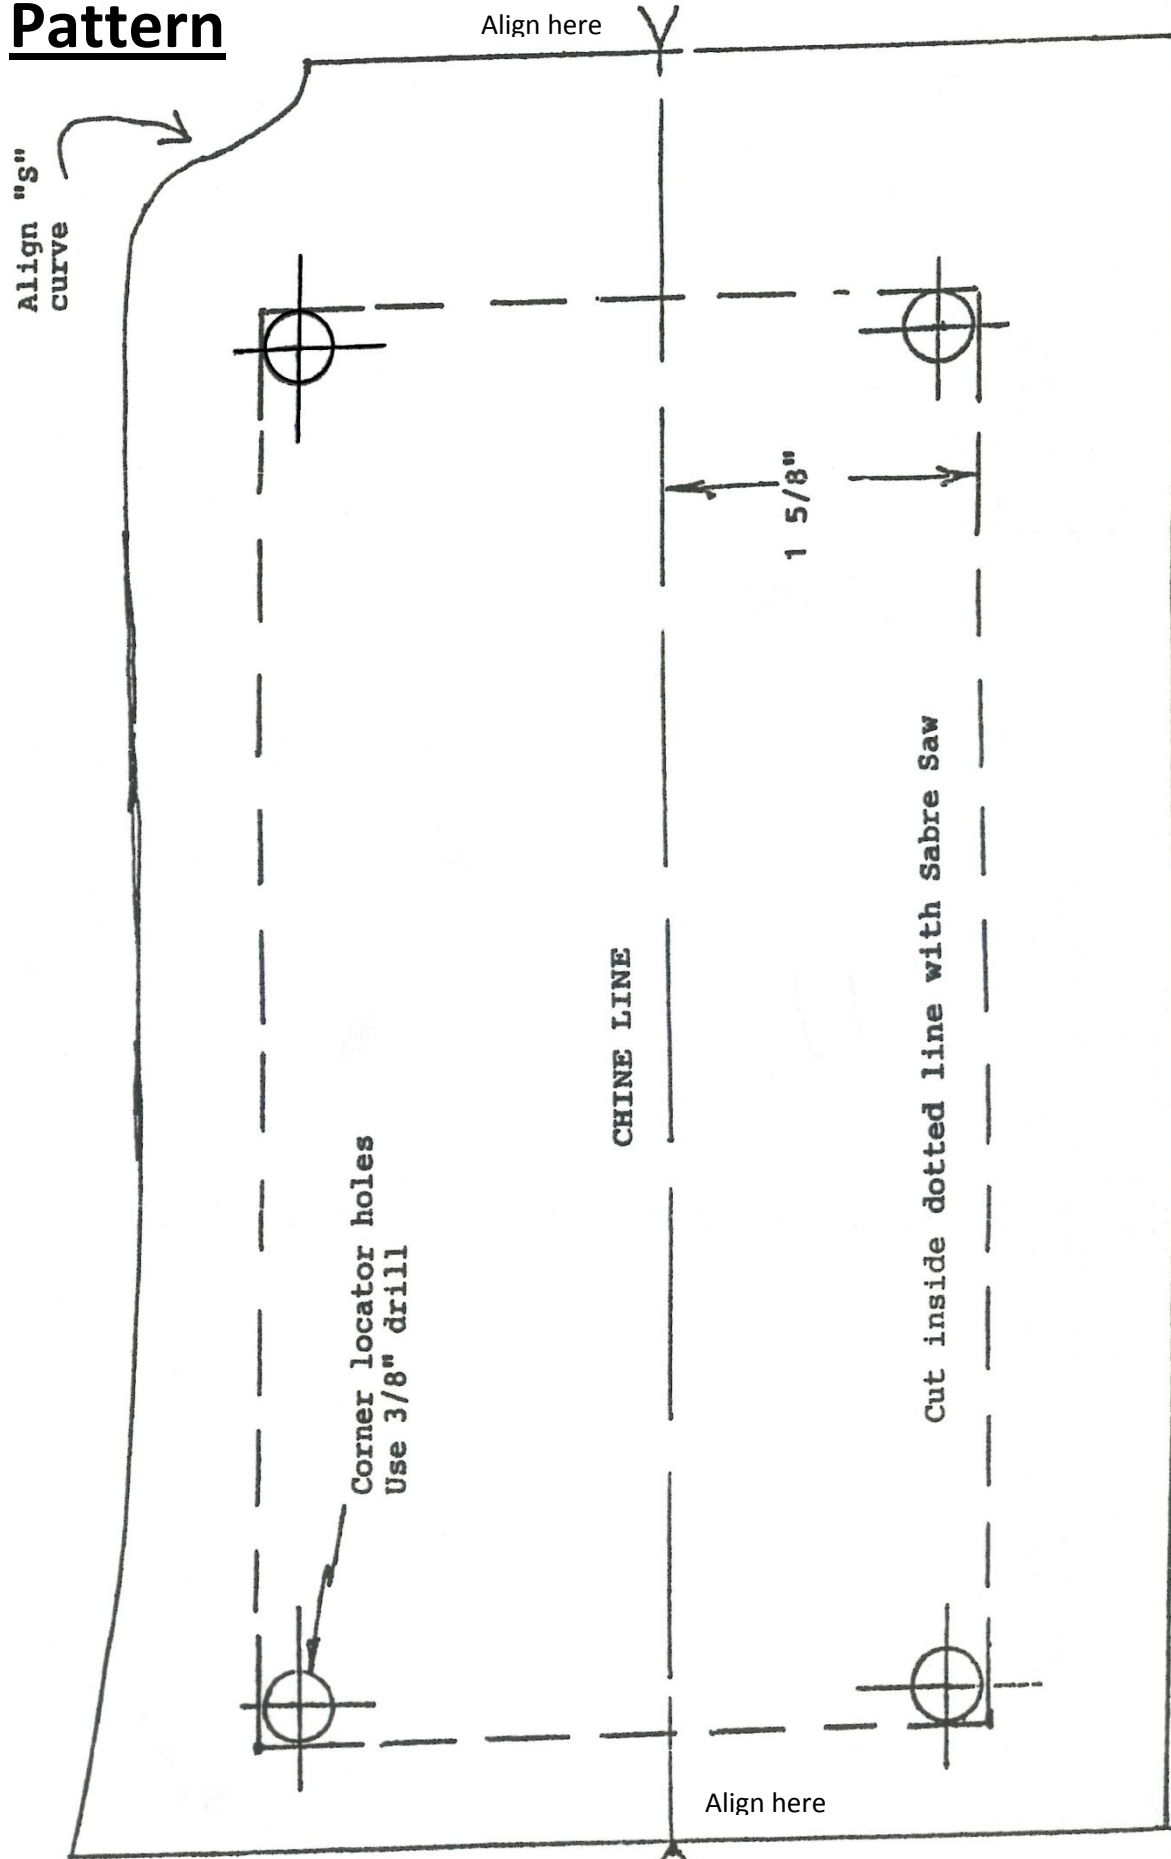

THIS PATTERN FOR PASSENGER SIDE OF CAR.
(TURN OVER FOR DRIVER SIDE OF CAR.)